

FEELWORLD

TP13A Teleprompter



User Manual

Contents

Contents	1
Safety Instructions	2
Package List	2
Setup Instructions	3
Setup Instructions	4
Bluetooth Remote Control	5
Bluetooth Remote Control Connections	6
APP Download	7
APP Instruction	7
APP Instruction	8
APP Instruction	9
Parameters	10
FAQ	10

Safety Instructions

- Do not expose the equipment to water or corrosive liquids.
- Keep equipment away from fire source.
- It is strictly forbidden to drop or collide. If there is an accidental drop or collision that leads to damage to the coated glass, please contact the customer service to replace the glass promptly, and the corresponding cost will be charged by the customer.
- Please do not disassemble the equipment without permission. If the equipment cannot be used normally due to inadvertent disassembly, please contact the customer service and send it back to the company for repairing. Customer should cover all the corresponding costs for the repair.

Package List



Teleprompter



Smartphone photography baffle



Foam rings



Tablet/smartphone clamp



Remote controller



Magnetic smartphone clamp



Microfiber cloth



Screw Driver

Setup Instruction

Camera Shooting

① Lock the teleprompter body on the main plate by screw



② To install the camera on the lifting mount, then cover the lense by the sunhood



③ By adjustin the screw to fix the highth of the teleprompter body



④ Adjust the lifting mount highth by locking bolt



Setup Instruction

Phone Shooting

① Lock the teleprompter body on the main plate by screw



② Remove the sunhood, and put on the panel and foam ring



③ Use the magnetic clamp to hold the cellphone, and affix on the panel



<Horizontal shooting>



<Vertical shooting>

④ Install the prompting devices (cellphone or tablet under 11")



<Horizontal shooting>



<Vertical shooting>

Bluetooth Remote Control



Notice: Due to different brand phone, some smartphone function will be different after connected the remote.

Bluetooth Remote Control Connections

1. Power On: Press and hold the power button until the indicator light comes on (about 2 seconds) and the system turns on.

Note: Please install the battery(Not Included) first.

2. Power Off: Press and hold the Power button until the indicator light turns off (about 5 seconds) and the system shuts down.

***Note:** The system will automatically shut down after 5 minutes when there is no wireless device connected on power on status. The system will also automatically shut down after 30 minutes without any operation even when there is a wireless device connected.*

3. iOS Connection

- 1) First of all, open the Bluetooth
- 2) Open the APP
- 3) Turn on the remote control (pay attention to the open order), and the LED indicator will flash
- 4) Then the system will automatically enter the wireless pairing mode
- 5) Allow Bluetooth pairing
- 6) APP will showing it has been automatically connected to FEELWORLD-XX successfully.

Tips: The remote control cannot be connected to the iPhone?

Firstly, please check whether the remote control is connected by Bluetooth in the Bluetooth settings of your phone.

Secondly, following the below steps to reconnect:

- Disconnect Bluetooth, remote control power off
- Turn on the Bluetooth of the phone, and then open the app, the remote control turn on again and pairing again according to the remote control connection instructions.

4. Andriod Connect

After power on, LED light on, auto pairing mode, turn on the Bluetooth of the phone, then turn on APP, will show the Bluetooth connected automatically.

APP Download



iOS users search “FEELWORLD” on APP Store to download



Android users search “FEELWORLD” on Google Play to download




or scan the QR code to download

APP Instruction

After installed APP and enter app

Tap “+” to enter Edit dialogue

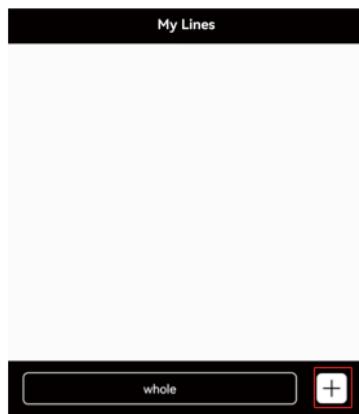


You can edit the title and content directly or click “Open” to import the text from the phone, then click “Save”

Click “whole”, you can manage the whole files



APP Instruction

Click “Folder Management”, you can set new folder or delete folder

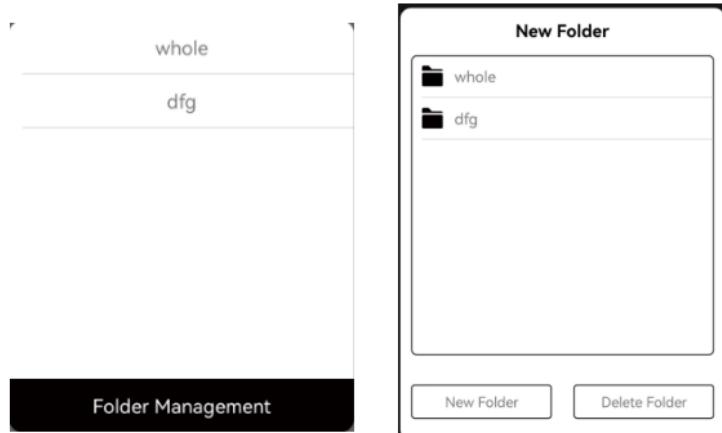


After saved the file, click the text to enter the play interface.

You can also tap icon to edit the text or tap icon to manage the file



TP10 is a folding and portable teleprompter which feature with 10-inch standard beam splitter allows you to clearly read scrollin...

If you want to delete the file, please swipe left at the corresponding file location and tap “Delete”

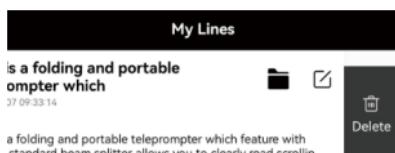

APP Instruction

After enterd play interface and tap any position, the function menu will show on the bottom, tap again can hide the function menu.

Click on the desired function icon to turn on its function, and the icondisplay red.
Tap again to turn off the function.



: Play/Pause



: Adjust the font size, word space, space, text color, background

The FEELWORLD Teleprompter app is easy to use, and has all the top requested features turning your smartphone into a high end professional teleprompter. It was designed to be used by itself on a smartphone, or with the Feelworld Teleprompter.



: Adjust browse speed



: Loop play



: Vertical/Horizontal screen switch



: Mirror



Parameters

Model	TP13A
Body Material	Full metal
Beamsplitter glass size	225x255mm
Beamsplitter transmission/reflection ratio	70/30
Shooting focal length	more than 24mm
Teleprompt device size supporting	max 11-inch
Remote controller using distance	about 10m
Unit size	260x320x240-300mm
Net weight	1.475kg

FAQ

The remote control can not be connected to the phone, how to solve?

- Whether the phone positioning permission is disabled.
- Whether the remote control has been connected to other phone.
- Whether the remote control has launched a new Bluetooth signal (to check if other App can search the signal).
- Restart the Bluetooth device and the app.

The remote control is connected to the phone, but can not control the file playback?

- Close the extra background running programs on the phone.
- Turn off the Bluetooth of other cell phones on site, make sure the remote control and the phone connected is the only pairing.
- Make sure that each time the remote control is connected to the phone through the app rather than through the Bluetooth setting of the phone system. Otherwise the remote control will not work.